

SCANSONIC

R5



USER MANUAL

## Contents

<b>02</b>	<b>CONTENTS</b>
<b>03</b>	<b>INFORMATION</b>
<b>04</b>	<b>FRONT PANEL OVERVIEW</b>
<b>06</b>	<b>REAR PANEL OVERVIEW</b>
<b>08</b>	<b>OPERATING R5</b>
<b>08</b>	<b>ALARM SETTINGS</b>
<b>09</b>	<b>SLEEP TIMER SETTINGS</b>
<b>09</b>	<b>DIM</b>
<b>09</b>	<b>PRESETS</b>
<b>09</b>	<b>FAVOR</b>
<b>09</b>	<b>AUX MODE, CONNECT YOUR IPOD</b>
<b>10</b>	<b>SPECIFICATIONS</b>

## Information

Congratulations on your new radio.  
Please take a moment to read this manual.  
Enjoy

### Safety instructions

Please store this instruction manual for future reference.

- Place the unit on a solid surface
- Do not expose Scansonic R5 to high humidity, direct sunlight, dirt, heavy vibration or extreme temperatures.
- Do not open the cabinet. Only qualified technicians are allowed to clean this Scansonic radios internal parts.
- If service or repair is required, this must also be done by qualified technicians.
- Use a duster or a slightly damp, soft and non-fluffy rag to clean the cabinet. Do not use corrosive or strong cleaning agents.
- Make sure no liquids or moisture penetrates the radio during the cleaning. Unplug the radio before cleaning it.


*Unplug the radio in following cases:*

- Foreign objects or liquids has penetrated the radio
- The radio cannot be operated properly.
- The cabinet has been damaged.
- The mains plug or the mains cable is defective.
- If the radio is not to be used for a long time.

### Disclaimer

Despite our best efforts we cannot guarantee that the technical data indicated are correct, complete and updated. We, Scansonic, reserve the right to make technical changes without notice.

## Front panel

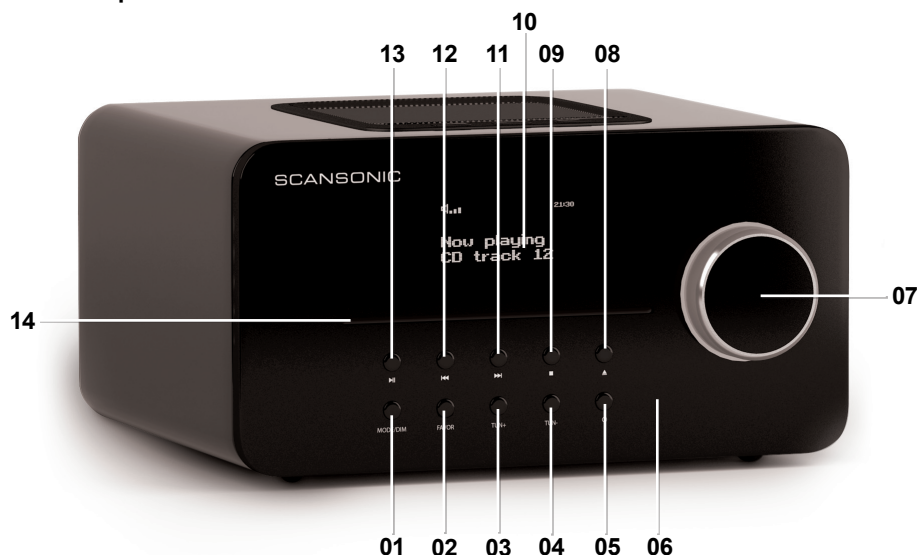

### 01 Mode / Dimmer

Press briefly to activate DIM function, Press and hold to enter MODE selection.

### 02 Favor

Press for selecting presets.

### 03 Tun+

Press briefly to increase the frequency tuning step, hold to scan for next station.

### 04 Tun-

Press briefly to decrease the frequency tuning step, hold to scan for previous station.

### 05 Power

Power on/off button.

**06** IR window

For receiving signal from remote control.

**07** Volume / menu knob

Rotate clockwise to increase volume and counterclockwise to decrease the volume. Press and hold to enter Setup menu, and press briefly to confirm selection.

**08** Eject

Push to eject cd from radio.

**09** Stop

Press to stop in cd mode.

**10** OLED display

OLED display is showing all information on the radio.

**11** Forward

Press to select next track in cd mode.

**12** Backward

Press once to start track again, and twice to select previous track in cd mode.


**13** Play / Pause

Press to start play track in cd mode, when track is playing button is used as pause button.

**14** CD slot in

Slot in window for cd.

## Rear panel

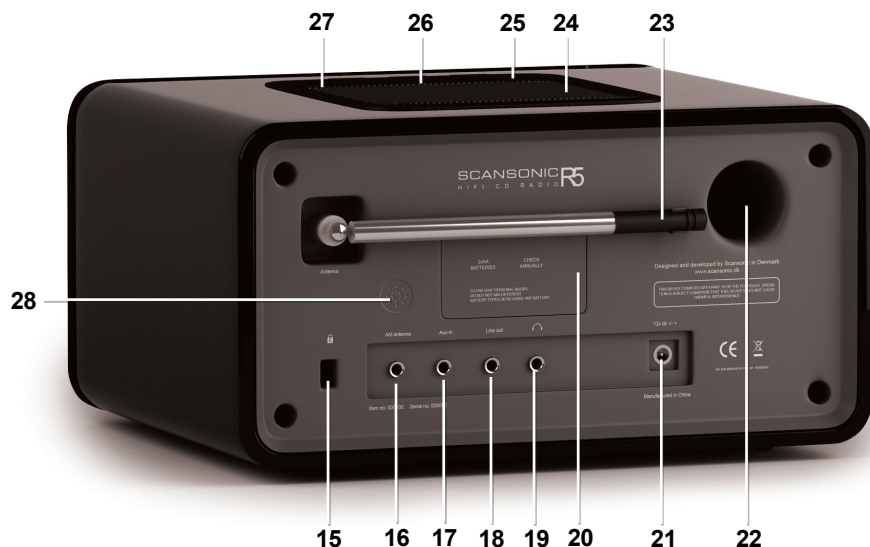

### 15 Key lock

Kensington lock to prevent from theft.

### 16 AM antenna jack

For receiving AM transmission.

### 17 AUX IN

Connect a stereo or mono audio source ( like iPod, MP3-player, TV or CD-player ) to this stereo input. Use 3,5mm jack to connect devices to the radio.

### 18 Line out

This radio can be used as a separate stereotuner by connecting it to an stereoamplifier. Use 3,5mm jack to connect the radio to amplifier.

**19 Headphones**

Connect a separate stereoheadset to this input to listen to the radio with headset. Inserting a headset will turn off the main speaker.

**20 Battery pack**

Real time clock backup.

**21 12v DC**

Use this input to the Scansonic R5 DC power supply.

**22 Porttube**

Bass reflex porttube for better sound quality.

**23 FM antenna**

The radio comes with a telescope antenna. To improve FM reception, adjust the antenna for best reception. The telescope antenna can be detached with the tool included in the giftbox so a coaxial antenna cable or outdoor antenna can be connected to this connector.

**24 Speaker**

3" fullrange loudspeaker.

**25 Alarm**

Alarm control and settings.

**26 Snooze**

Press to snooze 5 minutes.

**27 Sleep**

Sleep timer control and settings.

**28 Beeper**

Beep outlet.

## Operating R5

### Standby mode

Press power button to power on and off

### Mode

Use the selection knob to choose between FM, AM, CD and AUX. Push selection knob to enter the desired mode.

### Setup menu

Hold down the volume button on the front panel or push the setup key on the remote control to enter the setup menu. Use the selection knob to choose and push to select

### Clock setting

- clock format, choose between 12hr or 24hr. Use the selection knob to choose and push to select
- clock time, use the selection knob to choose the desired time and push to select

### Factory reset

Use the selection knob to choose and push to select yes or no.

Yes will restore default settings on the radio

### Audio setting

Use the selection knob to choose between Bass or Treble and push selection knob to select. Then you turn the knob clockwise to increase and counter clockwise to decrease the level of Bass or Treble.

## Alarm settings

Press alarm button on the top of the radio or on the remote control to enter alarm settings.

Use the selection knob to choose and push to select :

- alarm on/off, choose between alarm on or alarm off.
- alarm time, choose the desired time and push the select knob
- alarm source, choose between FM, AM, CD or BEEP. FM/AM source must be saved as preset in advance.
- alarm volume, you turn the knob clockwise to increase and counter clockwise to decrease the level of the volume of the alarm.



**Snooze**

To enter snooze mode press snooze on top of the radio and the radio will snooze for 5 min and the alarm will sound again. Press snooze when radio is playing to mute.

**Alarm off**

Press Alarm or power button to shut off the alarm

## Sleep timer settings

Press the sleep button on the top of the radio or on the remote control to enter sleep settings

Use the selection knob to choose and push to select

- sleep on/off, choose between sleep on or sleep off
- sleep time, choose the desired time and push the select knob. (5 minutes is minimum)

## DIM

Dim the light in the display by pressing 'mode/dim' button - there are 7 steps.

## Preset

Select the desired station, press and hold the FAVOR to show the Preset list, press TUN+/TUN- to choose a position among preset 1~6, press selection knob to select or press the numeric buttons on remote controller to save the desired station

## Favor

To recall favorites, press the FAVOR key to show preset list, press TUN+/TUN- to choose the favorite, press big rotary knob to confirm or press the numeric buttons on remote controller to recall the preset directly.

## Specifications

CD	Slot-in CD player
Band	FM
Output power	7 watts rms
Loudspeaker	3" full range
Antenna	FM telescopic, removeable
Power	DC 12volts
Inputs	DC 12 volts (for net adapter) AUX in – for iPod, iPhone etc
Outputs	Line out – for connecting to amplifier Headphones
Dimensions	245 x 125 x 200mm
Weight (nett)	1,5 kg w/o adapter



**enjoy**